



BeltUpp has been designed:

- For children over 15kg and approximately 4 years old in Group 2 seat.
- To keep your child in a safe and comfortable in an upright position.
- To be easy to install, use and adjust.
- To aid road safety by giving a safer seating position for the child and a more focussed driver.



STRAIGHT UP SAFETY



The BeltUp strap comes in two parts:

- **Part 1**, the buckle short strap and the locking clip.
- **Part 2**, the tongue, long adjustable strap and the slider clip.

How to install


Keep the child seat in the correct position in the car. Separate part 1 and 2 by pressing the red release button.

Locate the bottom anchor point of the cars integral adult 3 point seat belt. This is normally down at the base of the seat on the same side as the door opening.

Attach the locking clip on part 1 to the strap at the base of the seat. Make sure the buckle is on the outside of the adult strap (facing outwards) so that it can be easily operated. **(Diagram 1)**

The buckle should be outside the seat so that when it is done up it is not on pressing the child's leg or lap.

Diagram 1

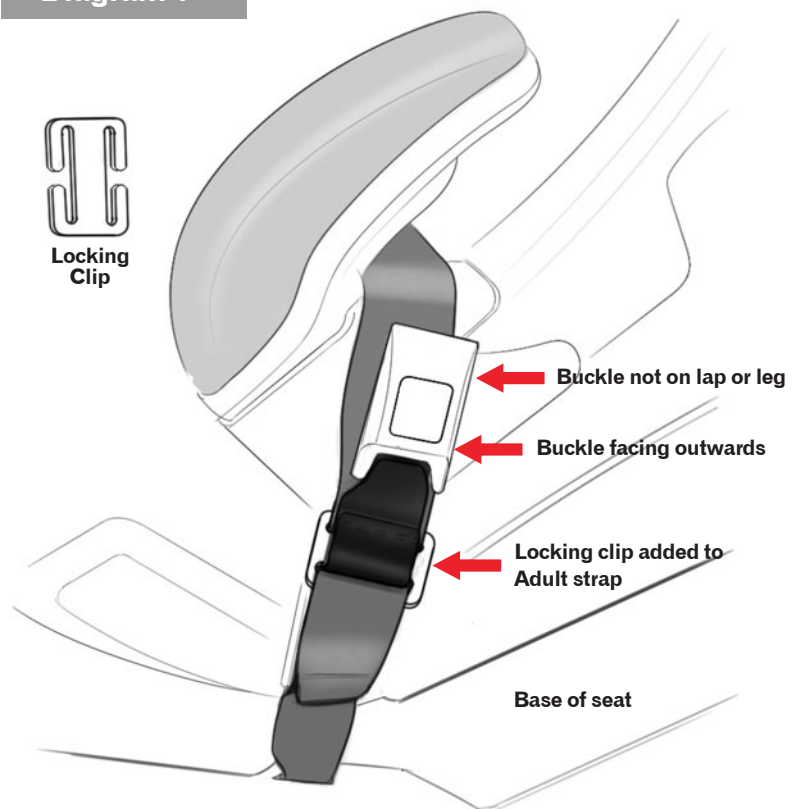

**STRAIGHT UP
SAFETY**

FITTING INSTRUCTIONS

ENGLISH

Belt UPP


Part 2 can now be easily attached behind the seat.

Locate the retracting adult belt as it goes through the top eyelet of the group 2 seat. This will be on the same side as the anchor point.

Just behind the eyelet at the back of the seat add the slider clip to the adult belt. **(Diagram 2)** This will allow the seat belt to be pulled out and retracted easily.

Follow the long adjustable strap now so it passes through the spare eyelet at the other side of the seat. The tongue now can be adjusted to meet the buckle and can be locked and released easily.

Diagram 2

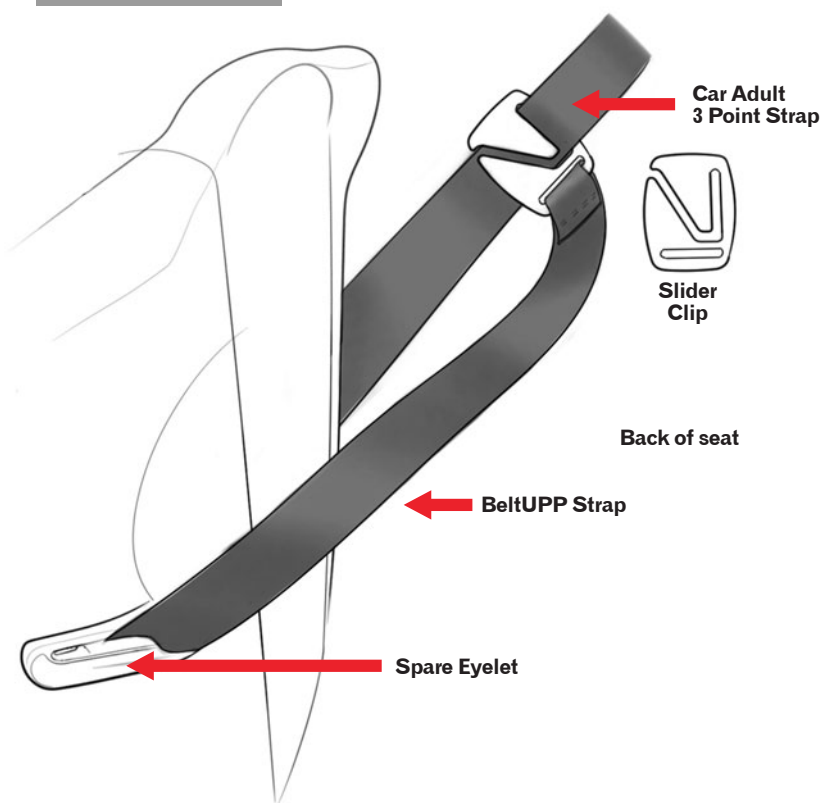

STRAIGHT UP
SAFETY

FITTING INSTRUCTIONS

ENGLISH




Once the child is in place and the belt connected the adjuster can be moved to keep a tight and upright position. This will ensure, even when asleep, that a safe and comfortable position is maintained.

The child should now have an 'X' pattern across their chest with the addition of the BeltUpp strap. **(Diagram 3)**

Real video footage for the fitting of our device and crash test data can be found at www.beltupp.com



Diagram 3

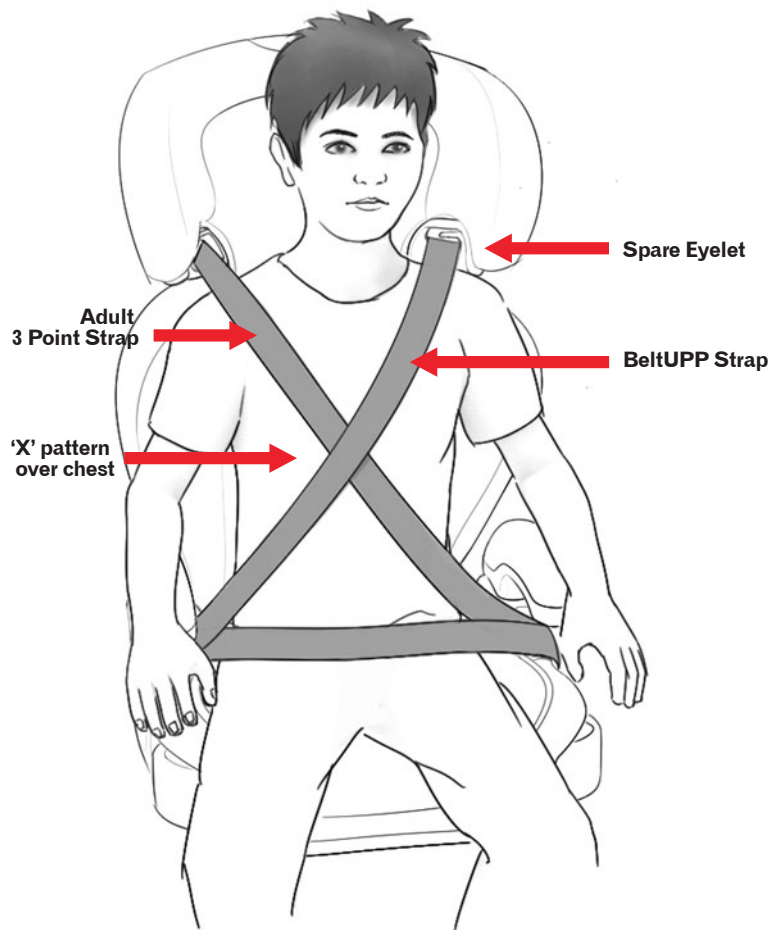

**STRAIGHT UP
SAFETY**

FITTING INSTRUCTIONS

ENGLISH



WARNINGS

There is no warranty either expressed or implied that the use of this product will eliminate the possibility of any injury that may otherwise occur. This is only for use with children over 15kg and approximately 4 years of age. It is an additional comfort and restraint mechanism and should only be used in conjunction with the existing adult belted system. Ensure the child seat is fitted correctly and safely before adding BeltUpp.

The straps should cross in an 'X' pattern on the chest only. This product is designed to aid in the prevention of injuries by keeping the child in the correct position in the seat. We cannot be held responsible for any injuries that may occur through incorrect fitting of the seat or our device. Always replace child restraint mechanisms and additional attachments after an accident.

**STRAIGHT UP
SAFETY**

FITTING INSTRUCTIONS

ENGLISH